



Tools Needed



1

Place cylinder into trim. Partially insert key into cylinder and thread the cylinder into the lock until it is against the trim.

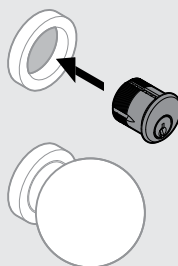

2

Tighten set screw.
Do not over tighten.
Do not use a power
screw driver.

